



**SWITCHES ON  
PANEL DOOR**

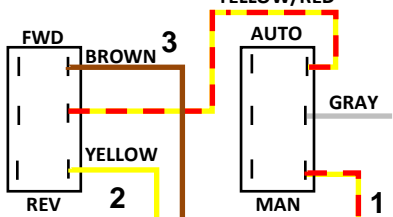

**PANEL SETUP:**  
 AUTO REVERSE – PLACE THE “AUTO/MAN” SWITCH TO “MAN”, SELECT DIRECTION, START THE PIVOT AND PLACE “AUTO/MAN” SWITCH TO “MAN”.

AUTO STOP – PLACE THE “AUTO/MAN” SWITCH TO “MAN”.

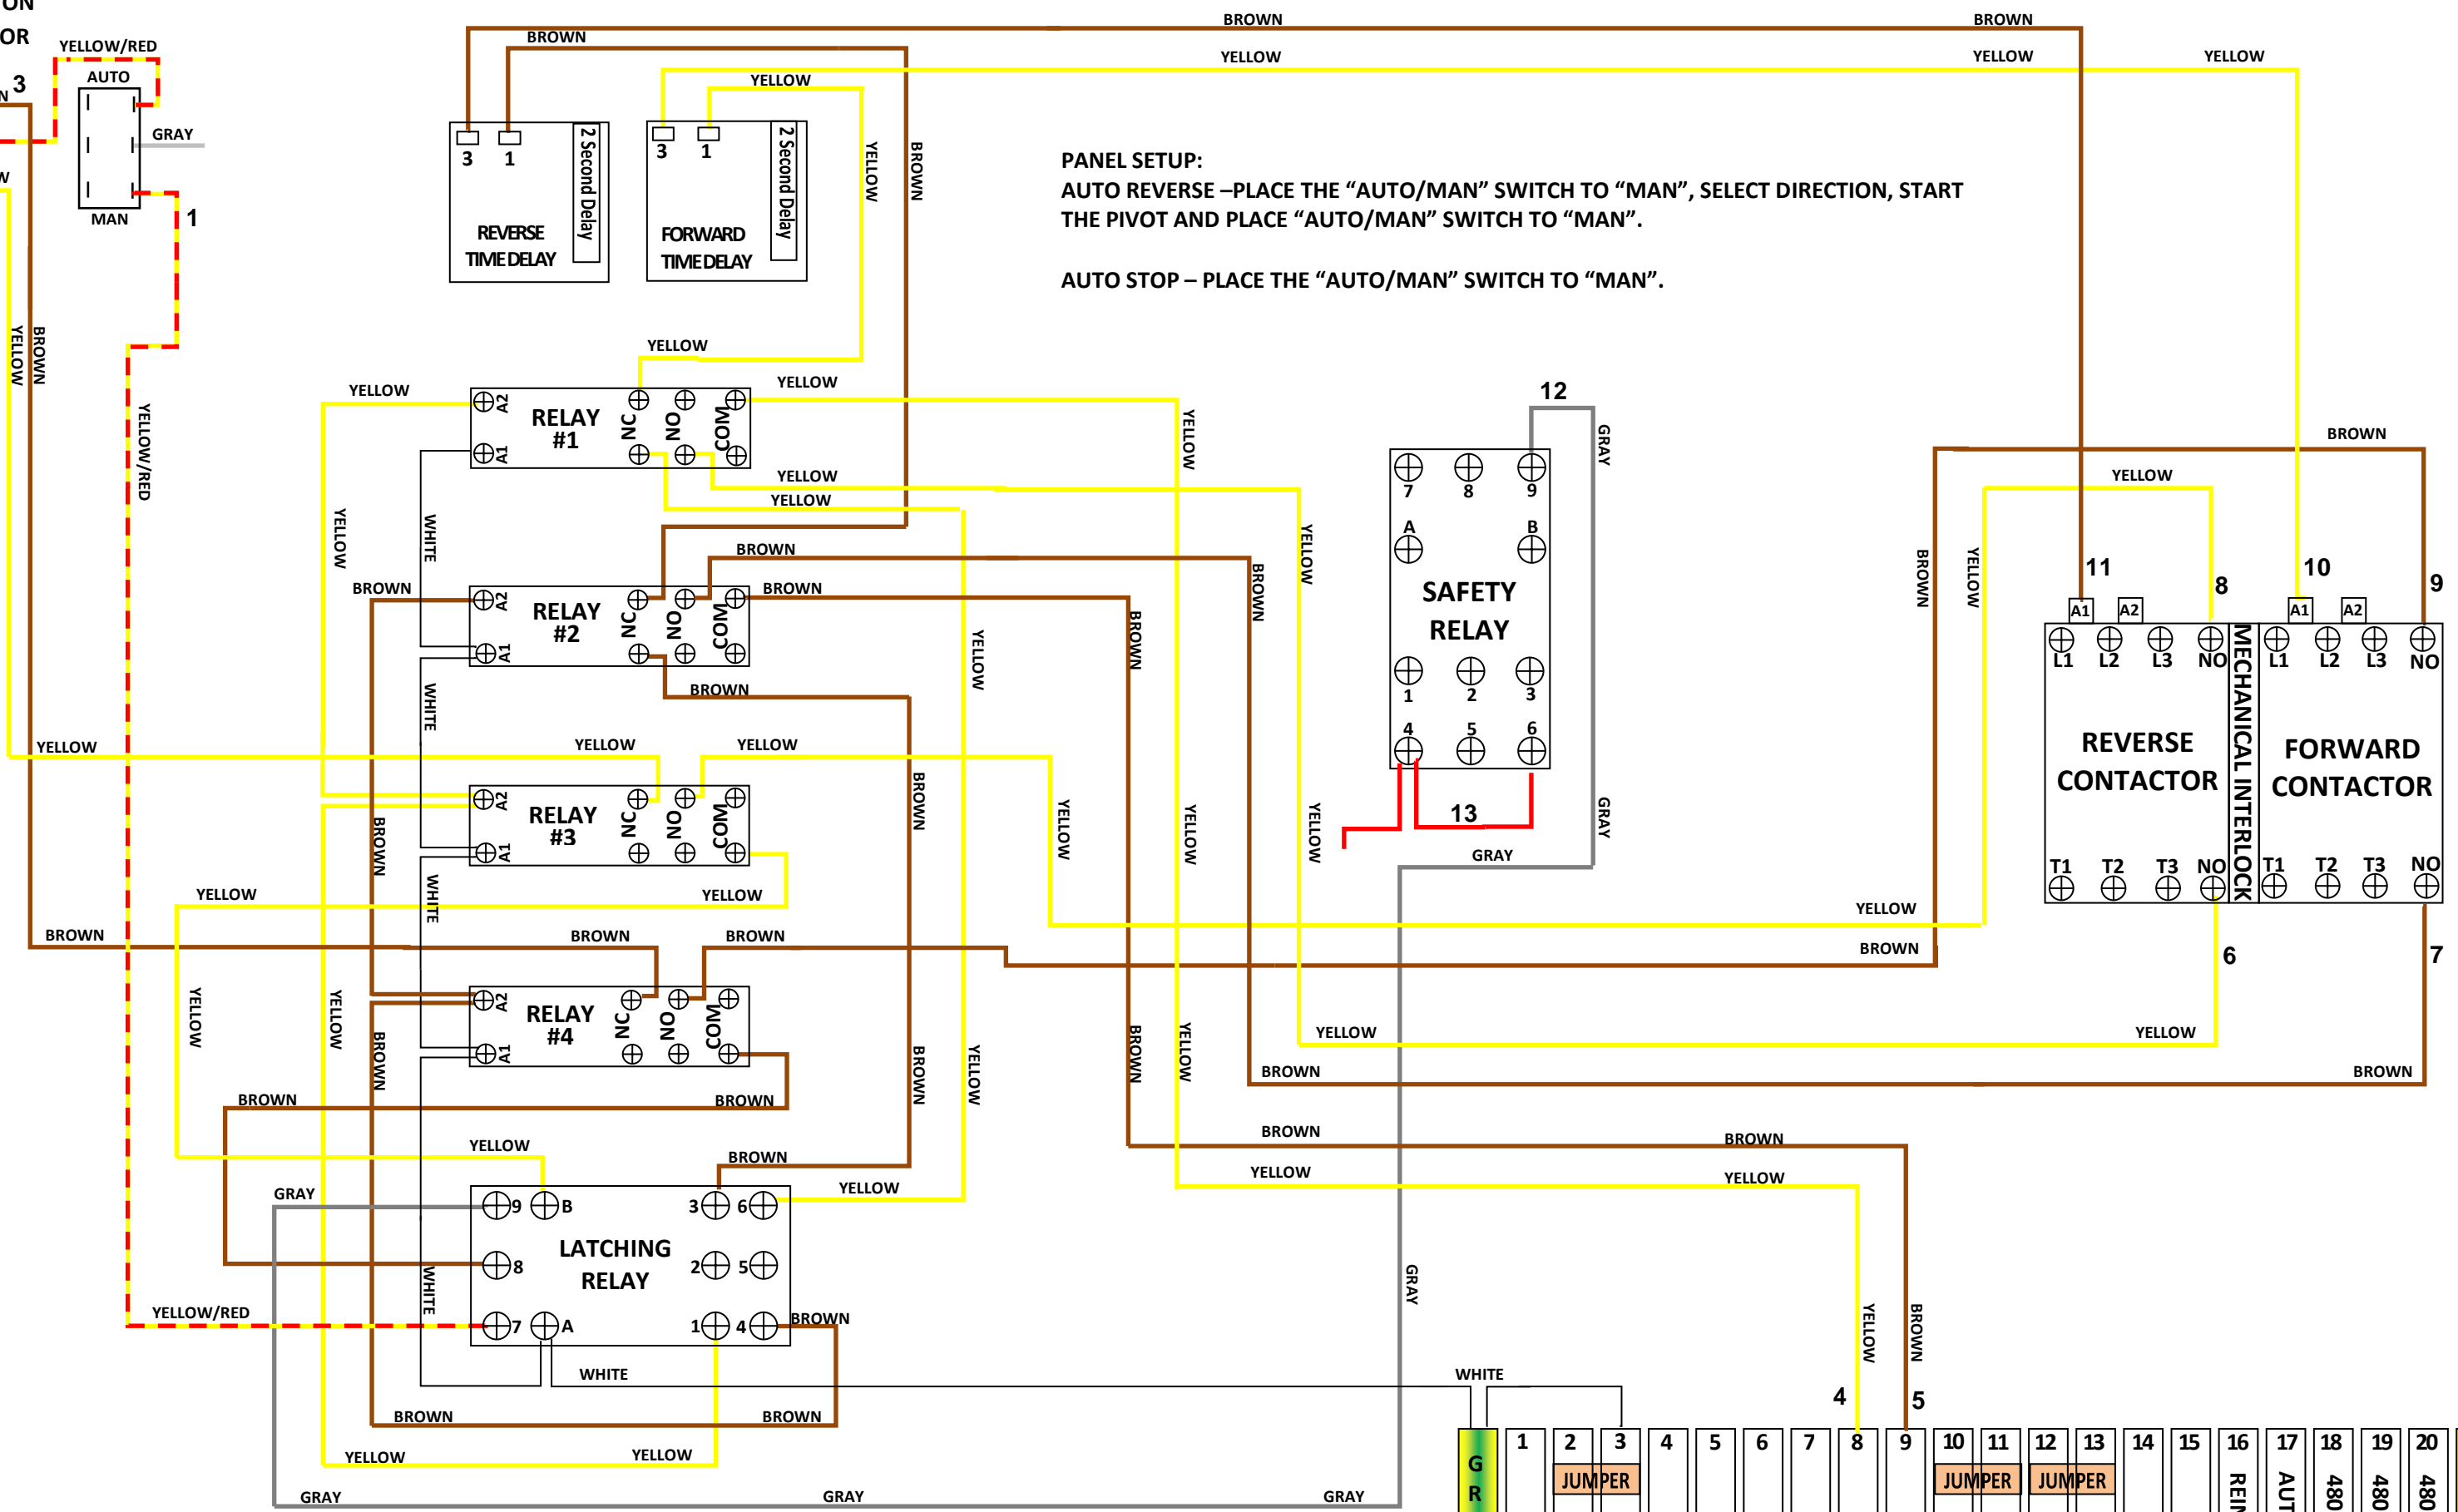

**AUTO REVERSE, END OF PIVOT OPTION**  
 2000/2300 PANEL P/N: 3052300620

G	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	G
R	120 VAC	JUMPER	NEUTRAL	END TOWER	PUMP START	PIVOT LINK	PIVOT LINK	FORWARD	REVERSE	JUMPER	JUMPER	JUMPER	SAFETY IN	SAFETY OUT	END GUN	REINKE SAFETY IN	AUTO REVERSE IN	480 VAC, 3PHASE	480 VAC, 3PHASE	480 VAC, 3PHASE	R