

# HYDRUS P/N: 4011-AL

**NOTE:** The wiring diagram is a representation and does not represent all Pivot manufacturers. Refer to the user manual provided by the manufacturer for correct pivot wiring.

Ground From Main Control Panel

120vac, Single Phase From Main Control Panel

120vac, Single Phase From Main Control Panel

120vac, Single Phase From Main Control Panel

380/480vac, 3Phase From Main Control Panel

380/480vac, 3Phase From Main Control Panel

120vac, Single Phase From Main Control Panel

120vac, Single Phase From Main Control Panel

120vac, Single Phase From Main Control Panel

120vac, Single Phase From Main Control Panel

380/480vac, 3Phase From Main Control Panel

